 
 


TB Starter

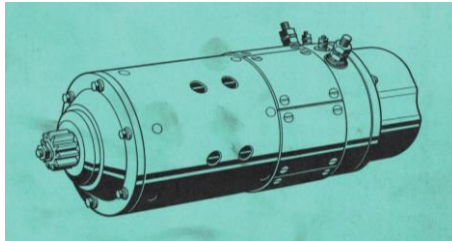


0 001 600 003	10 KW Rechts / Clockwise	13 Z/T
0 001 600 006	10 KW Rechts / Clockwise	11 Z/T
0 001 600 007	10 KW Rechts / Clockwise	13 Z/T
0 001 600 010	10 KW Rechts / Clockwise	11 Z/T
0 001 600 011	10 KW Links / Counterclockwise	11 Z/T
0 001 601 001	15 KW Rechts / Clockwise	13 Z/T
0 001 601 007	15 KW Rechts / Clockwise	17 Z/T
0 001 601 019	15 KW Links / Counterclockwise	15 Z/T
0 001 601 025	15 KW Rechts / Clockwise	11 Z/T

TE Starter

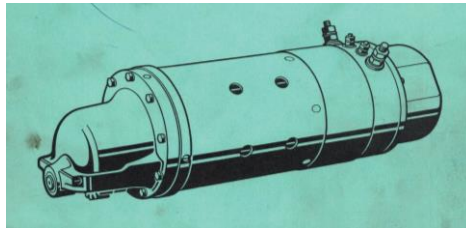

0 001 602 002	10 KW Rechts / Clockwise	15 Z/T
0 001 603 006	15 KW Rechts / Clockwise	15 Z/T

 TF Starter

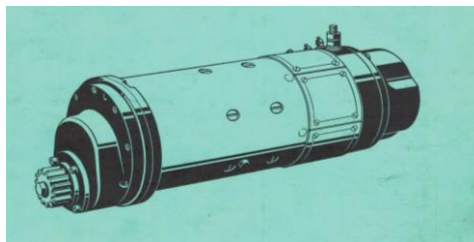

0 001 608 003	15 KW Rechts / Clockwise	14 Z/T
---------------	--------------------------	--------